


# SPARE PARTS LIST

# GASOLINE BRUSH CUTTER

## Part list

Drawing 1/2

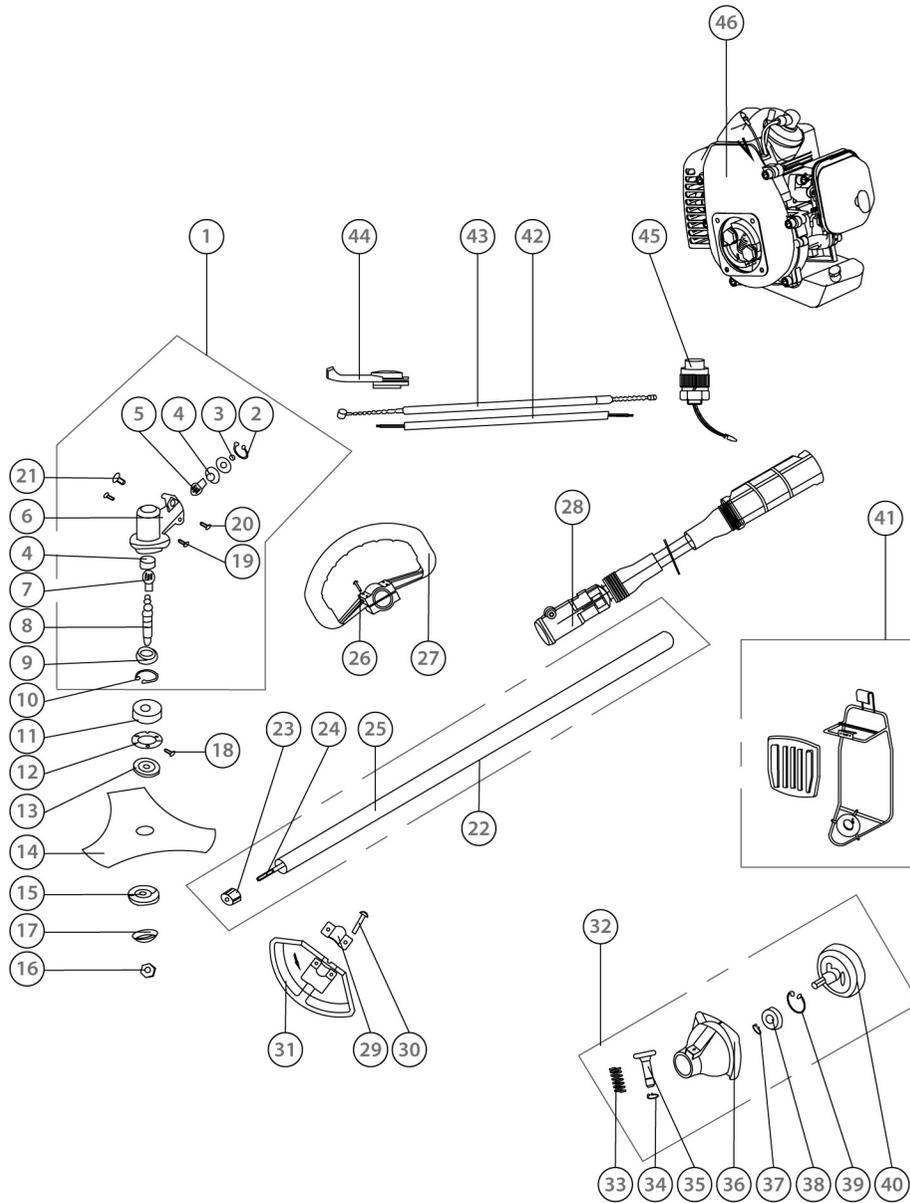


Part	Description	Q.TY	Notes	Part	Description	Q.TY	Notes
1	Gear box component			41	Back hanging kit		
2	Retainer 26			42	Off line		
3	Retainer 10			43	Power line		
4	Bearing 6000			44	Switch component		
5	Driving gear			45	Ignition switch		
6	Gear box			46	Engine		
7	Passive gear						
8	Transmission shaft						
9	Bearing 6002						
10	Retainer 32						
11	Oil seal 28x12x7						
12	Protective cover						
13	Platen						
14	3T blade						
15	Platen						
16	Nut						
17	Protective cover						
18	Screw M5x10						
19	Screw M6x12						
20	Screw M6x18						
21	Screw M5x25						
22	Transmission shaft component						
23	Oil bearing 26						
24	Transmission shaft						
25	Aluminum tube						
26	Screw M5x35						
27	Handle						
28	Soft shaft component						
29	Safety guard holder						
30	Screw M5x25						
31	Safety guard						
32	Connecting case component						
33	Spring						
34	Retainer						
35	Pin						
36	Connecting case						
37	Retainer						
38	Bearing 6202						
39	Retainer						
40	Clutch						

# SPARE PARTS LIST

# GASOLINE BRUSH CUTTER

## Part list

Drawing 2/2

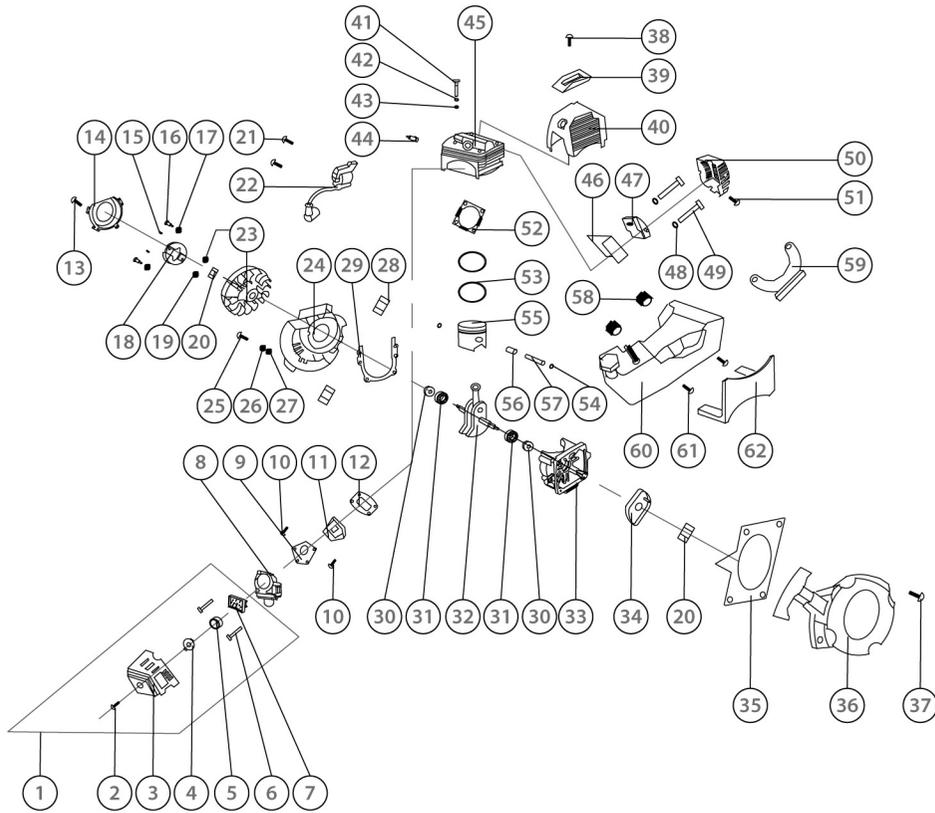

Part	Description	Q.TY	Notes	Part	Description	Q.TY	Notes
1	Air filter kit			41	Screw M5x125		
2	Screw M5x16			42	Spring washer Ø5		
3	Air filter cover			43	Washer Ø5		
4	Spring washer			44	Spark plug		
5	Sponge			45	Cylinder		
6	Screw M5x55			46	Muffler gasket		
7	Air filter holder			47	Muffler		
8	Carburetor			48	Washer Ø5		
9	Carburetor gasket			49	Bolt M5x60		
10	Screw M5x25			50	Muffler cover		
11	Air intake tube			51	Screw M5x12		
12	Air intake tube gasket			52	Cylinder gasket		
13	Screw M5x20			53	Piston ring		
14	Flywheel cover			54	Piston pin circlip		
15	Position pin 5x10			55	Piston		
16	Position bolt			56	Needle bearing		
17	Washer			57	Piston pin		
18	Shoe block			58	Damping set		
19	Shoe block gasket			59	Fuel tank bracket		
20	Nut M8			60	Fuel tank		
21	Screw M5x16			61	Screw M5x15		
22	Ignition coil			62	Fuel tank protection bracket		
23	Flywheel						
24	Left crankcase						
25	Screw M5x20						
26	Spring washer Ø5						
27	Washer Ø5						
28	Position pin 5x10						
29	Gasket						
30	Oil seal 12x22x7						
31	Bearing 6206						
32	Crankshaft components						
33	Right crankcase						
34	Start the dial component						
35	Aluminum gasket						
36	Starter components						
37	Screw M5x18						
38	Screw M5x12						
39	Cylinder top cover						
40	Cylinder cover						