


earth auger whole machine bom

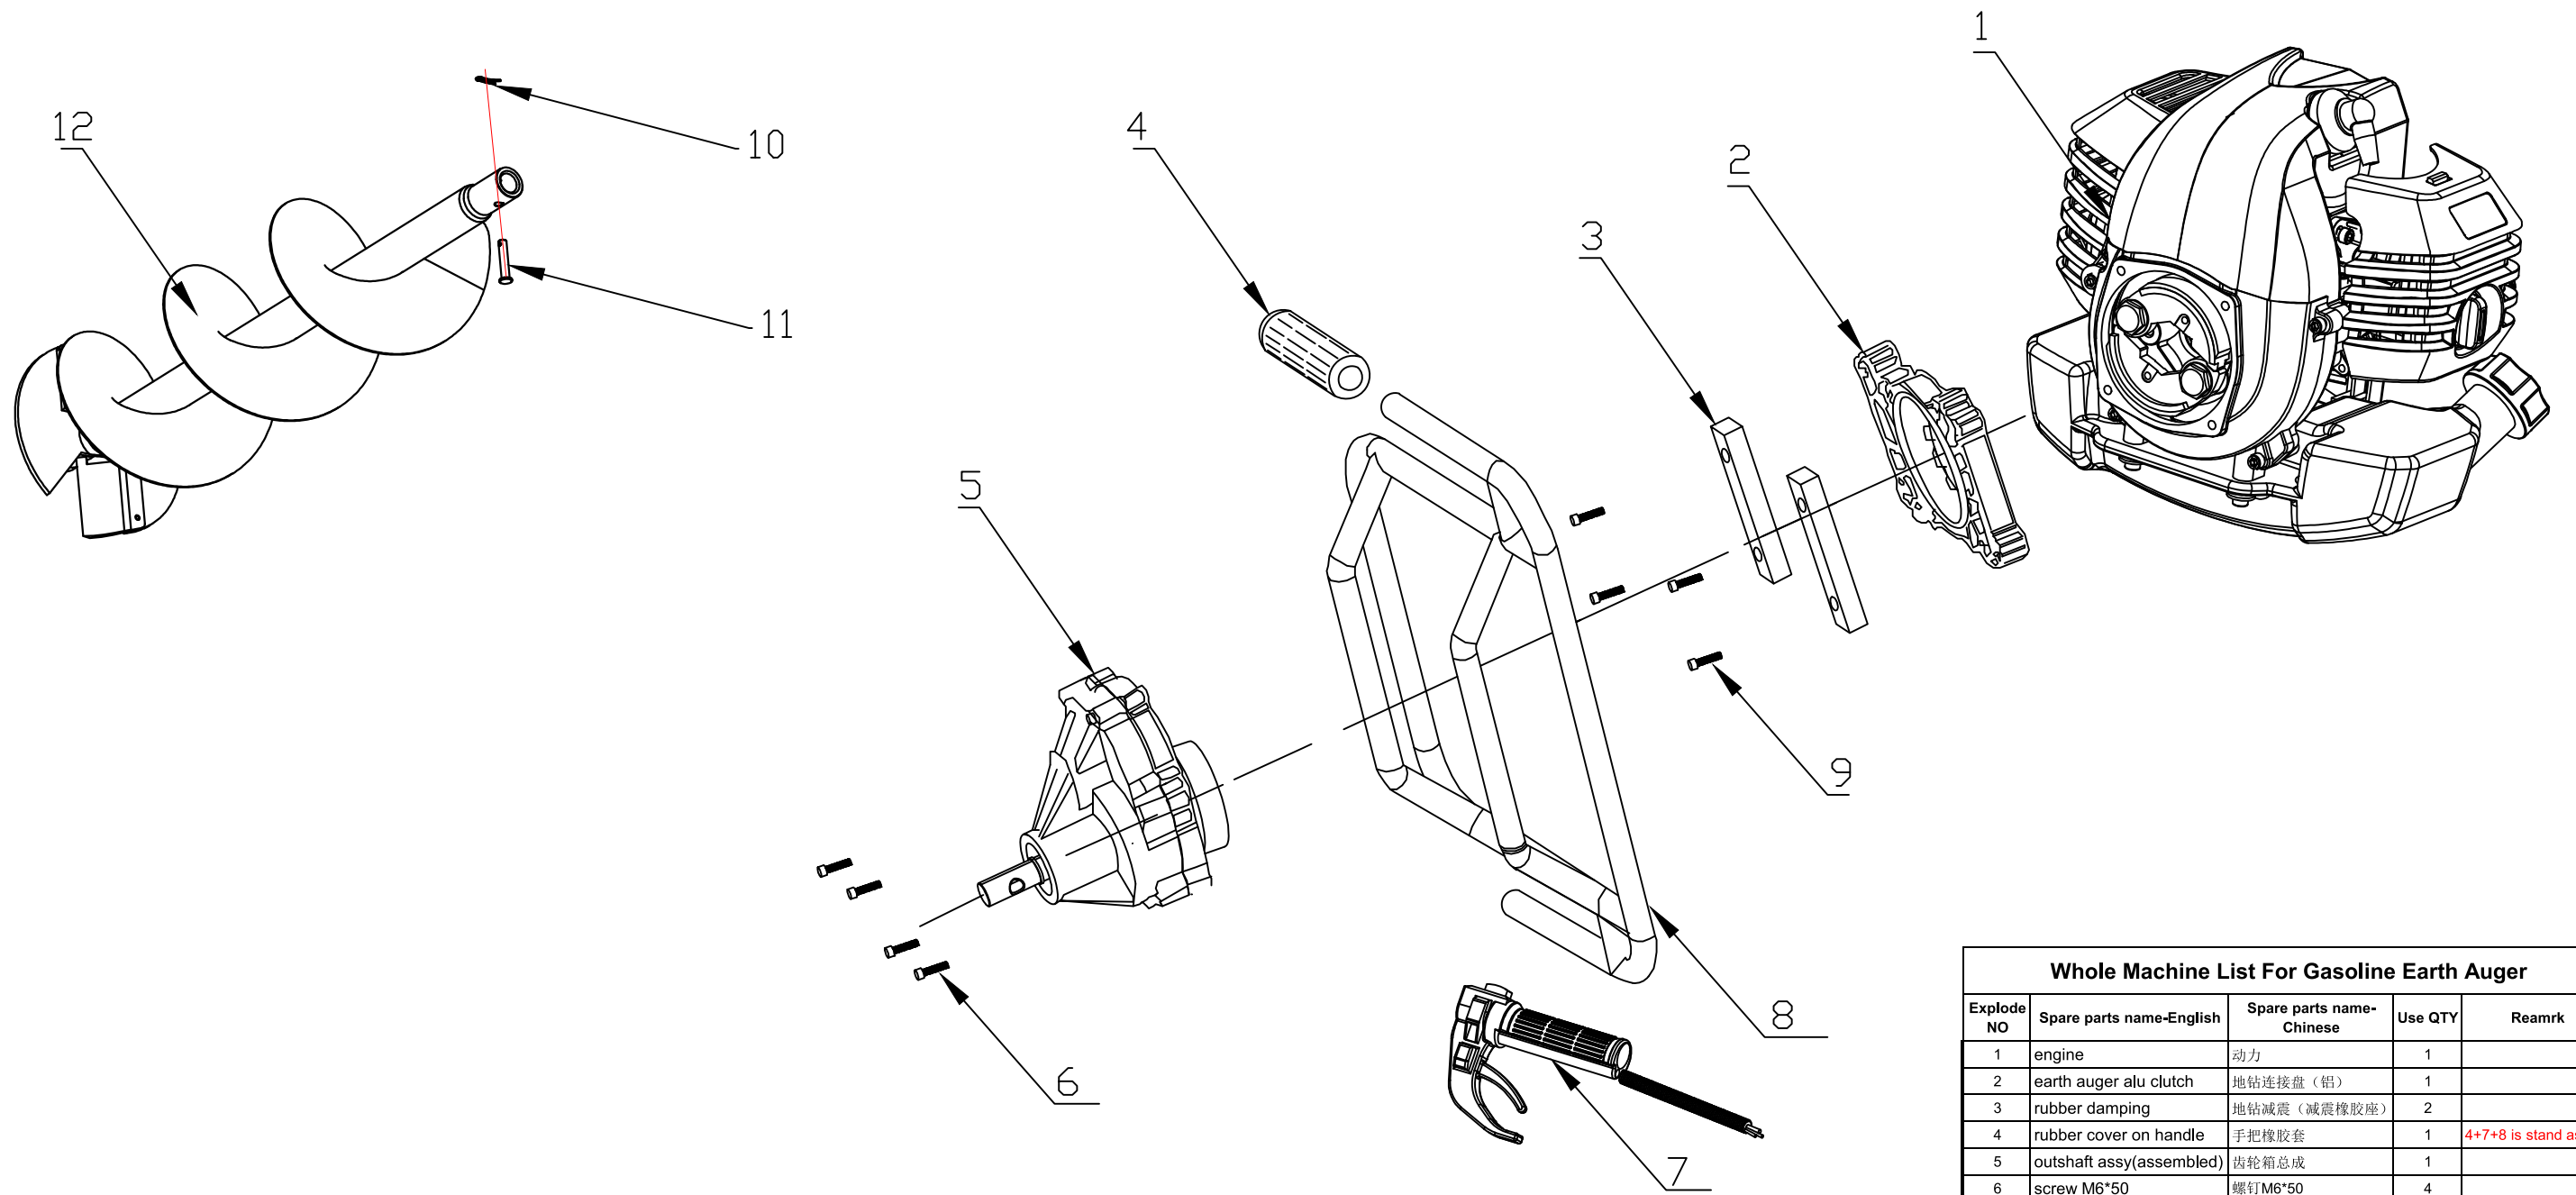

Whole Machine List For Gasoline Earth Auger				
Explode NO	Spare parts name-English	Spare parts name-Chinese	Use QTY	Reamrk
1	engine	动力	1	
2	earth auger alu clutch	地钻连接盘(铝)	1	
3	rubber damping	地钻减震(减震橡胶座)	2	
4	rubber cover on handle	手把橡胶套	1	4+7+8 is stand assy
5	outshaft assy(assembled)	齿轮箱总成	1	
6	screw M6*50	螺钉M6*50	4	
7	switch assy	油门开关组件	1	4+7+8 is stand assy
8	stand	地钻架	1	
9	screw M6*20	螺钉M6*20	4	
10	drill bit	钻头	1	
11	pin roll	销轴B型φ8*45	1	
12	cotter pin	开口销φ2.5*25	1	